




How to take the Bar Gun Apart

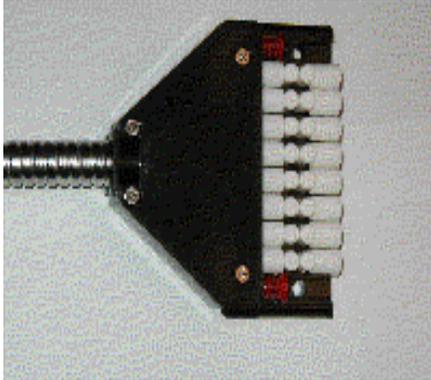


Remove the 4 Phillips head screws

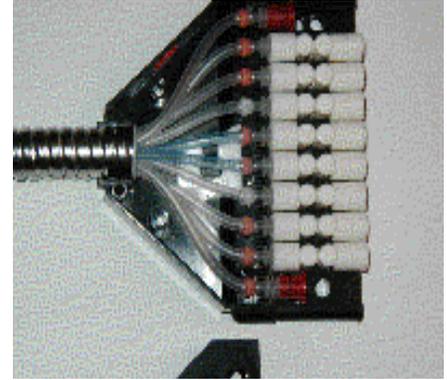

This will show you the tubing

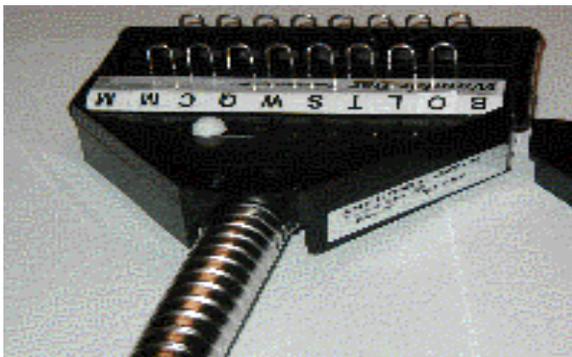

Then turn the gun over, you will see 2 rows of "Hair Clips". Lift the row closest to the flavor letters up about 3/8".

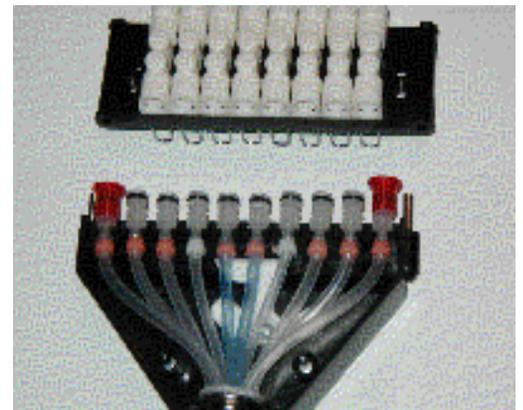

Use the "White" button to slide the the manifold apart.

**Now is the important part.... You MUST mark ALL of the lines, it is best to use tape and a sharpie. I suggest #1 thru 10, and put a piece of tape where you need to start #1, as when you put them back you will be up-side-down, and it is easy to put them back backwards.

**A trick to putting the lines through a small hole, like the bathroom sink drain "Pop-Up", is to hold the flex line, and pull the tubing... this will give you about a foot. Re-move the red caps, they are on un-used lines, and it is easier to put through the hole. Start with about 1/2 the lines, then stagger in one at a time, till you get them all through the hole, be careful not to kink them. Now snap all the lines back, and put the manifold back together. * Make sure to get all the "Hair Clips" down all the way... look to see they are all level. Screw the plate back, put the red caps back, and you can now mount the gun. From the duct line, put the "Soda" to "S" (the "S" next to the "W"), and the "Water" to "W", and "C" is normal to be "Coke" and the other "S" "Sprite" but the flavors are up to you. If you have Non-Carbonated flavors like Iced Tea or Lemonade they will be the bottom buttons. The 842 gun has 2 Non- Carbs and the 851 has 1 Non-Carb, on the lower right. It is also a good idea to put the Stainless Steel inlet fitting in the back of the gun first, before putting tubing on. Be sure to crimp the clamps on all the lines.

